

Window frame (refer to window manufacturer for method of support and fixing)

Edge of panel and vertical section under window flange to be sealed before window is installed.

Window support as supplied by window manufacturer

Flexible flashing tape wrapped over window sill to minimum requirements as per flashing tape manufacturer

Window liner

8 mm gap nominal

Selected coating

10 mm min.  
5 mm gap

Watertight airseal as per E2/AS1 section 9.1.6


For fixing over HomeRAB™ Pre-Cladding/RAB™ Board/flexible underlay refer to fixing table

Selected interior lining

Axon™ Panel

Timber cavity batten

HomeRAB™ Pre-Cladding/  
RAB™ Board/flexible underlay

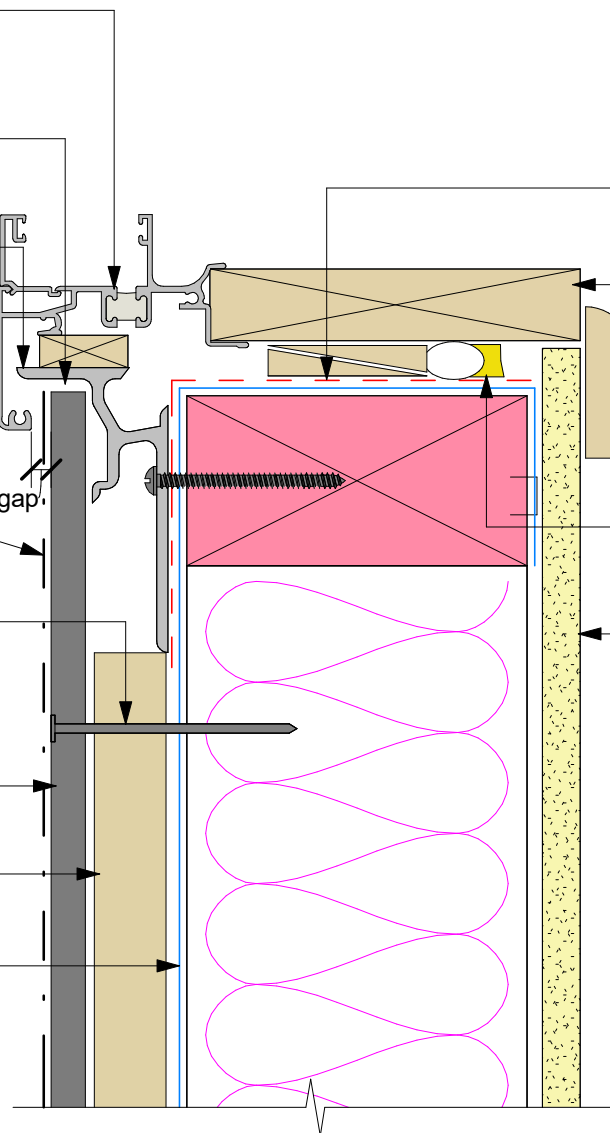

#### General notes for materials selection

- \* Flexible underlay must comply with acceptable solution E2/AS1.
- \* Flashing tape must have proven compatibility with the selected flexible underlay and other materials with which it comes into contact.
- \* When HomeRAB™ Pre-Cladding/ RAB™ Board are used flashing tape to be applied to the entire opening.

Refer to the manufacturer or supplier for technical information for these materials.