


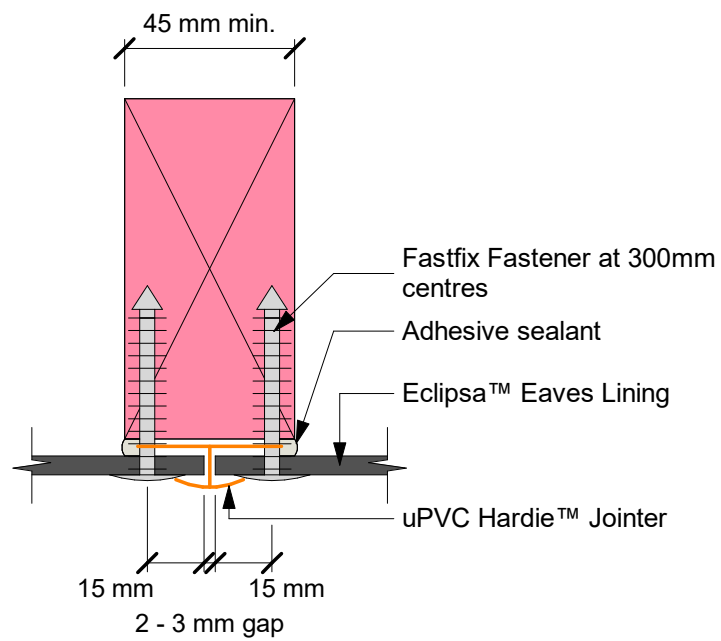

Note: Use a 6mm drill bit for drilling holes in sheet for fixing Fastfix fasteners