


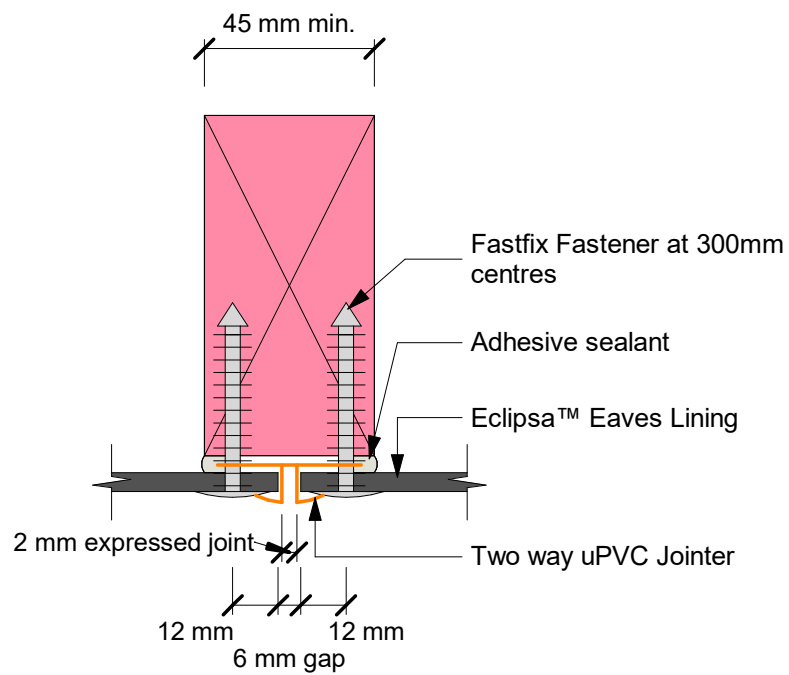

Note:

- Eclipsa™ Eaves Lining, use a 6mm drill bit for drilling holes in sheet for fixing Fastfix fasteners
- Hardie™ Flex Eaves Lining, is fixed with Hardie™ Flex Nails