


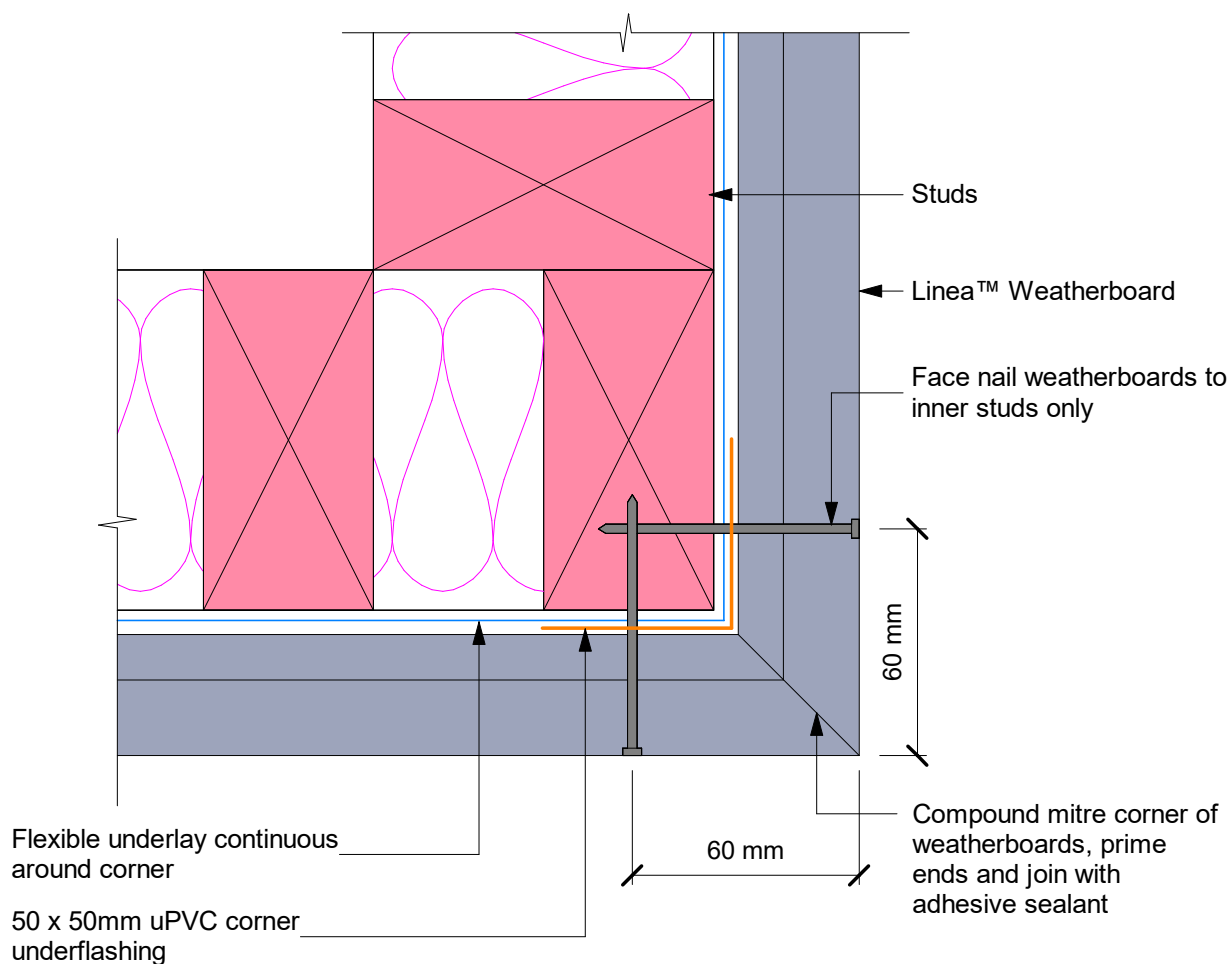

Note: Adhesive sealant must be used on the full end face of both weatherboards. Push lightly together and wipe off excess