


Step 1:

Apply 6mm continuous bead of construction adhesive to floor joist

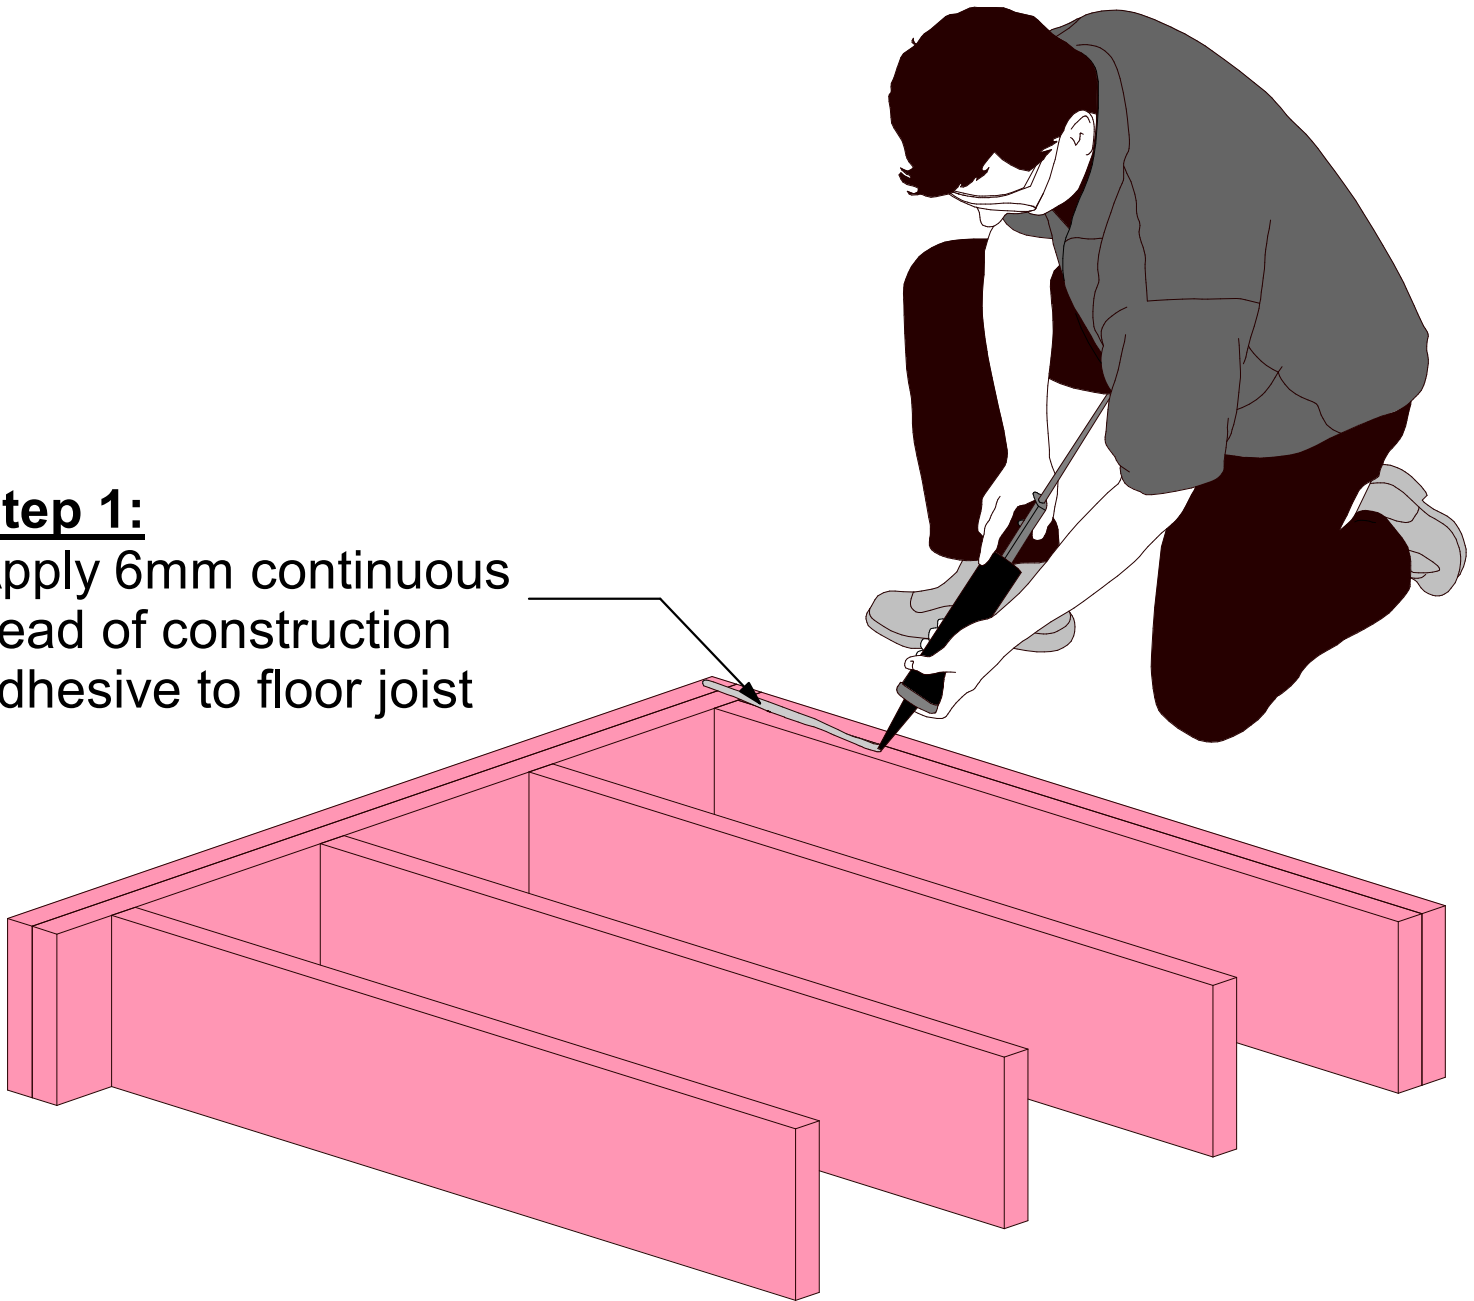

jhl_sec_fl_004



JamesHardie™

www.jameshardie.co.nz

Secura™ Flooring

Fixing of panel
Construction Adhesive

February 2025
Scale: 1 : 10

Figure 4