


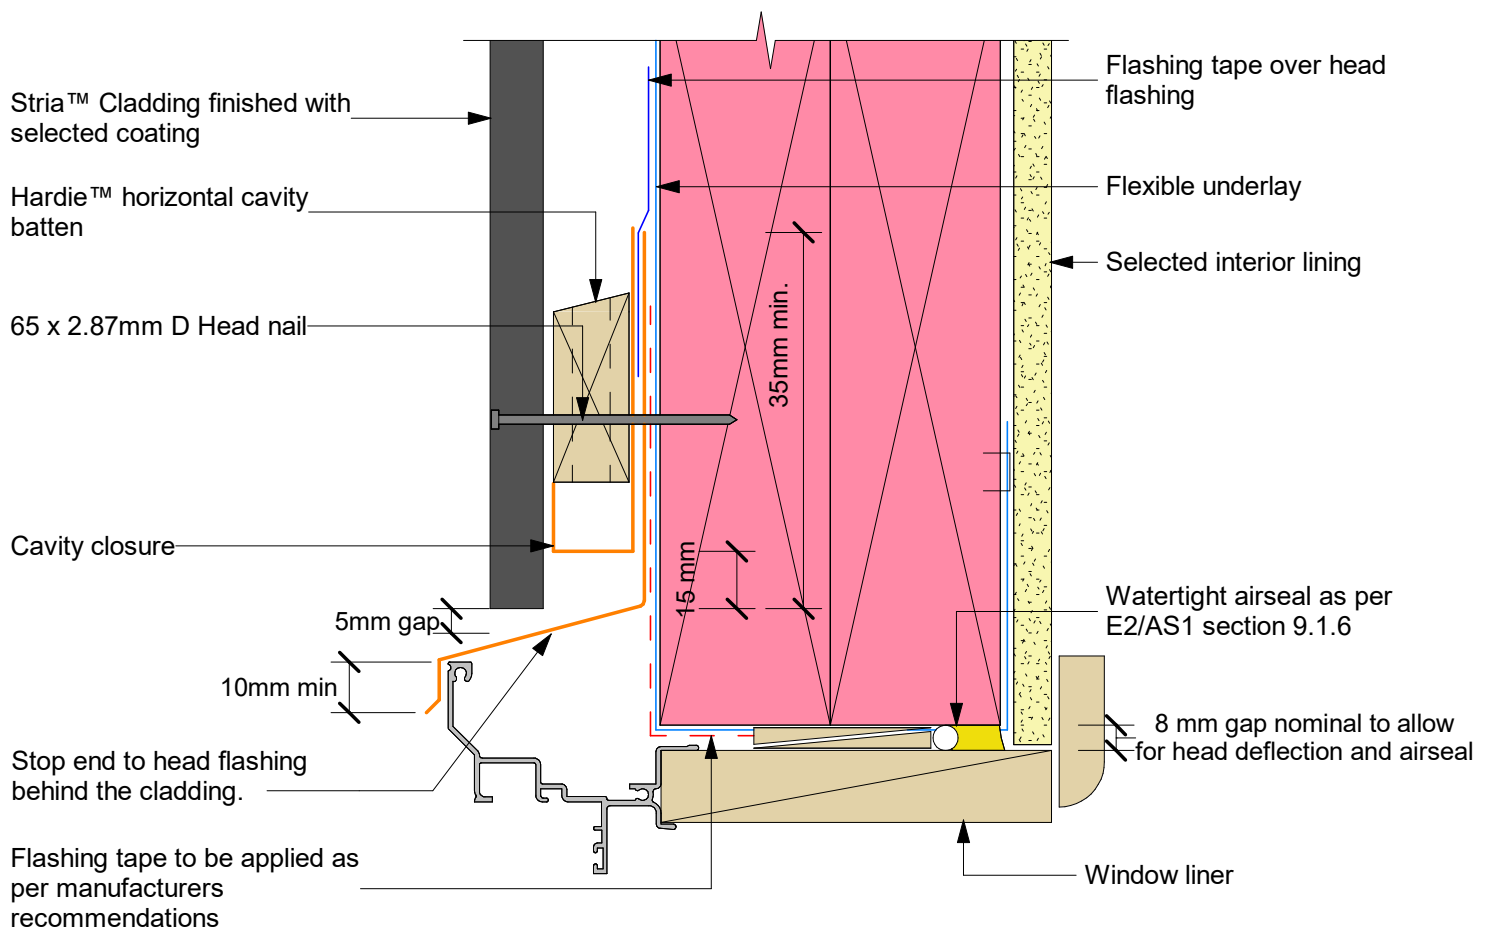

Note:

1. Site cut edges to be primed
2. Sealant must be installed between head flashing and window flange in VH and above wind zones. Refer to Figure 71 of E2/AS1
3. Alternatively, the head flashings can be formed with stop ends as per E2/AS1